



10 " 15 AMP SLIDING COMPOUND MITER SAW

Operator's Manual

SAVE THIS MANUAL

You will need this manual for safety instructions, operating procedures and warranty.

Put it and the original sales receipt in a safe dry place for future reference.

For questions about this product, Please call 1-866-915-8626

IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electric tools, machines or equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.



READ ALL INSTRUCTIONS BEFORE USING THIS TOOL

1. **KEEP WORK AREA CLEAN.** Cluttered areas can cause injuries.
2. **CONSIDER WORK AREA ENVIRONMENT.** Don't use power tools in damp, wet, or poorly lit locations. Don't expose tools to the rain. Keep the work area well lit. Don't use tools in the presence of flammable gases or liquids.
3. **KEEP CHILDREN AND BYSTANDERS AWAY.** All children should be kept away from the work area. Don't let them handle machines, tools or extension cords. Bystanders can be a distraction and can be injured.
4. **GROUNDING TOOLS MUST BE PLUGGED INTO AN OUTLET THAT IS PROPERLY INSTALLED AND GROUNDED.** a low-resistance path to carry electricity to the ground away from the operator, should the tool malfunction electrically. Do not remove the grounding prong from the plug or alter the plug in any way. If in doubt as to whether the outlet is properly grounded according to code, check with a qualified electrician.
5. **OBSERVE PROPER PRECAUTIONS REGARDING DOUBLE INSULATION.** This tool is double insulated. It is equipped with a polarized plug. One blade is wider than the other, so it will fit into a polarized outlet only one way. If you have difficulty inserting the plug, try reversing it. If it still doesn't fit, do not alter the plug; have a qualified electrician install a polarized outlet.
6. **GUARD AGAINST ELECTRIC SHOCK.** Prevent body contact with grounded surfaces: pipes, radiators, ranges, and refrigerator enclosures. When your body is grounded the risk of electric shock increases. When working wherever "live" electrical wires may be encountered, try to ascertain whether there is a danger of shock. **DO NOT TOUCH ANY METAL PARTS OF THE TOOL** while using it. Hold the tool only by the plastic grip to prevent electric shock if you contact a live wire.
7. **DO NOT MISUSE THE CORD.** Never carry your tools by the cord or pull on the cord to unplug it. Protect the cord from potential sources of damage: heat, oil & solvents, sharp edges, or moving parts. Replace damaged cords immediately.
8. **WHEN WORKING OUTDOORS, USE AN OUTDOOR-RATED EXTENSION CORD.** An extension cord rated for outdoor use must be marked "W-A" or "W".
9. **DO NOT EXPOSE ELECTRICAL POWER TOOLS TO MOISTURE.** Rain or wet conditions can cause water to enter the tool and lead to electric shock.
10. **ENSURE THE EXTENSION CORD YOU USE IS OF SUFFICIENT GAUGE FOR ITS LENGTH.**



Recommended Minimum Wire Gauge for Extension Cords

| Amps from Tool Nameplate | 25' length | 50' length | 75' length | 100' length | 150' length | 200' length |
|--------------------------|------------|------------|------------|-------------|-------------|-------------|
| 0-5 amps | 16 ga. | 16 ga. | 16 ga. | 14 ga. | 12 ga. | 12 ga. |
| 5.1-8 amps | 16 ga. | 16 ga. | 14 ga. | 12 ga. | 10 ga. | Do Not Use |
| 8.1-12 amps | 14 ga. | 14 ga. | 12 ga. | 10 ga. | Do Not Use | Do Not Use |
| 12.1-15 amps | 12 ga. | 12 ga. | 10 ga. | 10 ga. | Do Not Use | Do Not Use |
| 15.1-20 amps | 10 ga. | 10 ga. | 10 ga. | Do Not Use | Do Not Use | Do Not Use |

11. **STORE IDLE EQUIPMENT.** Store equipment in a dry area to inhibit rust. Equipment also should be in a high location or locked up to keep out of reach of children.
12. **DON'T FORCE THE TOOL.** It will do the job better and more safely at the rate for which it was intended.
13. **USE THE RIGHT TOOL.** Don't force a small tool or attachment to do the work of a larger industrial tool. Don't use a tool for a purpose for which it was not intended.
14. **DRESS PROPERLY.** Don't wear loose clothing or jewelry; they can be caught in moving parts. Protective, non-electrically conductive gloves, protective eyewear and non-skid footwear are recommended. Wear protective hair covering to contain long hair and keep yourself from harm.

IMPORTANT SAFETY INSTRUCTIONS



15. **USE EYE PROTECTION.** Use a full-face mask if the work you're doing produces metal filings, dust or wood chips. Goggles are acceptable in other situations. Wear a clean dust mask if the work involves creating a lot of fine or coarse dust.
16. **SECURE WORK.** Use clamps or a vise to hold the work, this frees both hands to operate the tool.
17. **DON'T OVERREACH.** Keep proper footing and balance at all times. Do not reach over or across machines that are running.
18. **MAINTAIN TOOLS.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. For safe performance. Keep handles dry, clean and free from oil and grease.
19. **AVOID UNINTENTIONAL STARTING.** Be sure the switch is in the **OFF** position before plugging in.
20. **ALWAYS CHECK AND MAKE SURE TO REMOVE ANY ADJUSTING KEYS OR WRENCHES BEFORE TURNING THE TOOL ON.** Left attached, these parts can fly off a moving part and result in injury.
21. **DO NOT USE THE TOOL IF IT CANNOT BE SWITCHED ON OR OFF.** Have your tool repaired before using it.
22. **DISCONNECT THE PLUG FROM THE POWER SOURCE BEFORE MAKING ANY ADJUSTMENTS.** Changing attachments or accessories can be dangerous if the tool could accidentally start.
23. **STAY ALERT.** Watch what you are doing & use common sense. Don't operate any tool when you are tired.
24. **CHECK FOR DAMAGED PARTS.** Before using this tool, any part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mountings, and other conditions that may affect its operation. Inspect screws and tighten any ones that are loose. Any part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in the instruction manual. Have defective switches replaced by an authorized service center. Don't use the tool if switch does not turn it on and off properly.
25. **REPLACEMENT PARTS.** When servicing, use only identical replacement parts.
26. **SERVICE AND REPAIRS** should be made by qualified repair technicians at an authorized repair center. Improperly repaired tools could cause serious shock or injury.

SAFETY PRECAUTIONS FOR COMPOUND MITER SAW

1. **WOOD ONLY.** The saw is designed for woodcutting only.
2. **DAMAGED OR WARPED SAW BLADES SHOULD NOT BE USED.** They are out of balance and could cause further damage to the saw and possible personal injury.
3. **USE ONLY WITH GUARD IN PLACE.** The guard protects the operator from cutting debris as well as from broken pieces of the blade, should it break in use.
4. **REPLACE THE TABLE INSERT WHEN WORN.** Excessive tear-out increases the likelihood of injury from flying debris. When setting the saw at a new angle, check that the blade does not cut into the table insert, rear fence, or another part of your saw.
5. **ALWAYS USE THE BLADE WRENCH TO TIGHTEN THE SAW BLADE ONTO THE ARBOR.**
6. **CONNECT YOUR MITER SAW TO A DUST COLLECTING DEVICE IF POSSIBLE.** If not, use the dust bag that comes with the tool and empty it regularly.
7. **USE A SAWBLADE SUITED TO THE CUTTING JOB AND MATERIAL TO BE CUT.**

SAFETY PRECAUTIONS FOR COMPOUND MITER SAW

- ALWAYS USE TABLE EXTENSIONS AND CLAMPS TO SUPPORT THE MATERIAL WHEN SAWING LONG WORK PIECES.**
- THE MATERIAL SHOULD BE PLACED FIRMLY AGAINST THE FENCE AND TABLE.** The turning of the saw blade should force it down against the table and rearward against the fence during the cut. Movement of the workpiece during the cut may cause the blade to jam and create a kickback. When this happens, the cutting head may jump out of your hand or the workpiece may fly loose and cause serious injury.
- DO NOT START THE SAW WITH THE BLADE IN CONTACT WITH ANY SURFACE.** This may cause the saw to bounce or kick back violently and could cause injury.
- IF MAKING A CUT USING ONE HAND TO HOLD THE SAW, ENSURE THE FREE HAND IS CLEAR OF CUTTING AREA.**




SPECIFICATIONS

Voltage: 120 volts AC, 60Hz
Current rating: 15 Amps
Blade Speed: 5000 RPM(No-Load Speed)
Blade Diameter: 10" 60 tooth carbide tipped
Arbor Size: 5/8"
Positive Miter Stops: 0, 15, 22.5, 30 & 45 degree
Miter Angle: 45 degree Left/ 45 degree Right
Bevel cuts up to 45 degree Left
Power Cord: 6-1/2 ft
Weight: 27.5 lbs
Cutting Capacity: 90 degree Cross cut 2-7/8" x 11-7/8"
45 degree Miter Cut 2-7/8" x 7-7/8"
45 degree Bevel Cut 1-5/8" x 11-7/8"
45 degree Miter/Bevel Cut 1-5/8" x 7-7/8"

Contents: Miter Saw, (1) 10" x 60 Tooth Carbide Blade, Blade Wrench, (1) Hold-Down Clamp, (2) Table Extensions, Dust Collection Bag & Product Manual

FUNCTIONAL DESCRIPTION

- Trigger
- Brush cover
- Lower blade guard
- Upper blade guard
- Saw blade
- Dust bag
- Bevel lock lever
- Hold-down clamp assembly
- Table extension
- Table extension lock
- Miter locking handle
- Miter scale
- Bevel scale

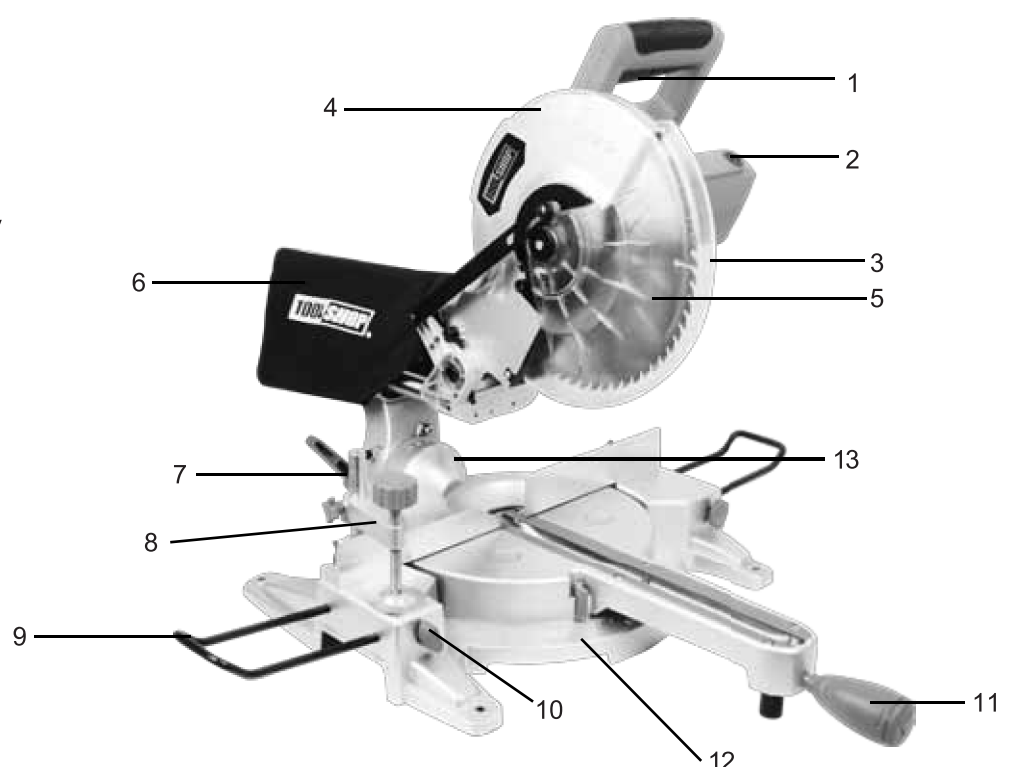

OPERATING PROCEDURES



CAUTION! *Be sure the saw is disconnected from its power source before making any repairs or performing maintenance!*

CLAMPING WORKPIECE:



WARNING: *For safe and accurate cuts, fix workpiece firmly into cutting position with hold-down clamp, otherwise the tool and workpiece may be damaged.*



1. Mount the hold-down clamp on one side of fence. Insert shaft of the hold-down clamp into the mounting hole and tighten the hold-down clamp retainer screw to affix the shaft of the hold-down clamp.
2. Adjust position of the hold-down clamp bracket according to the workpiece thickness and shape. Tighten the screw to fix the bracket in place.
3. Make sure that when the handle is lowered, beveled or angled in any position, no part of the tool contacts the hold-down clamp.

START UP USING YOUR SAW

After unpacking, reading the instructions, attaching the machine to the workbench, and checking that all attachments are correctly installed, you can use your saw. Be sure to wear the appropriate protective equipment.

1. Check to ensure everything is correctly attached, screws are fastened, and all adjusting keys and wrenches are removed.
2. Connect the saw to power.
3. Unlock the saw from its various storage and shipping positions.
4. Pressing the trigger lock button, then squeezing the trigger switch in the handle, while holding the trigger lock button down, will start the saw. The cutting head should be in the raised position and the blade fully enclosed in the guard before starting the miter saw.



WARNING: *Before plugging in, confirm that the trigger is normal. If the locking button is not depressed, do not pull the trigger with force as this may cause severe damage to the switch.*



REMEMBER:

- Before use, release the head lock button and raise the handle.
- Before turning on, confirm that the saw blade does not touch the work piece or the vise at any position.
- When cutting, press the handle down slowly. DO NOT force the handle, as this may cause damage to your saw.
- Before starting to cut, confirm that the saw blade has attained full speed. After cutting is complete wait until the rotation of the blade STOPS completely before lifting the handle to its top position.
- For your safety, remove chips, small pieces, etc. from the table top before operation.
- For best performance, ALWAYS keep saw blade clean and sharp.

OPERATING PROCEDURES

5. To begin cutting, lower the cutting head. The lower blade guard opens automatically.
6. After cutting, allow the head to come back up. The guard will close automatically.
7. The saw will stop when you release the trigger switch in the handle.



MODES OF USE

Chop cut:

The head is locked in the upright position. The table rotation is locked at 0°. This is a good setting for simple 90° crosscuts.

Miter cut:

The head is locked in the upright position. To unlock the table rotation, unscrew the locking handle and press on the miter detent spring lever with your thumb. Move the table rotation to the left or right up to 45° left & 45° right. The miter detent spring lever, if released, will stop the table at detents at 0°, 15°, 22.5°, 30°, & 45° left and right. Use the locking handle to lock the table at the desired angle, especially those between the detents.

Bevel cut:

To unlock the head angle (bevel) adjustment, loosen the bevel lock handle at rear of the saw. Lock it when the blade is tilted at the desired angle. The table rotation is locked at 0°.

Compound cut:

Unlock and move the table rotation to the left or right as in miter cuts above. Using the lever at the back of the saw, unlock the head and bevel it to any position from 0° – 45° left, then lock it in place.

NOTE: At extreme positions, the hold-down clamp should be moved to the right side of the table to prevent interfering with the movement of the cutting head. Always check before making the cut if there is any potential interference from the clamp or any other part of the machine.



MAINTENANCE

NOTE: Even though the angles are marked on the machine, it is always a good idea to check them by making a trial cut. See *Aligning Miter and Bevel*, below.

- Inspect the cord regularly and have it replaced by an authorized repair facility if it is damaged.
- Check the brushes occasionally (after about 50 hours of use) and replace if worn. The brushes can be replaced by removing the motor back cap. The brushes and their springs could jump out of the holders- be careful not to lose them. Inspect the brushes. If the contact surface is not smooth, or it is worn or heavily used, replace both brushes. Insert the new brushes and springs in their holders and re-fasten the cap.
- The plastic kerf plate table insert should be replaced if damaged to reduce the risk of chips lodging in the slot and catching in the blade.
- Keep the vents clear of dust and debris. This will help prevent possible electrical shorts and ensure proper cooling.
- Keep the tool housing and handle clean and free of oil and grease by using mild soap and a damp (not wet) cloth.



ALIGNING MITER AND BEVEL

Miters and bevels have been set at the factory. However, use may affect settings. Please use the following procedures when your tool needs adjustments.

Miter Angle

1. Set the bevel angle at 0 degree.
2. Loosen the locking handle.
3. Depress the miter detent spring lever.
4. Turn the saw table so that the arrow in the kerf plate points to 0 degree, then move the table slightly clockwise and counter-clockwise and let the miter detent spring lever fit into the groove (it doesn't matter if needle doesn't indicate 0 degree).
5. Loosen the four hex bolts behind the fence with the blade socket wrench.
6. Lower the saw head and lock it in place with the head lock button.
7. Make sure the Fence is perpendicular (at a 90° angle) to the Saw Blade, using carpenter square. (can be purchased at any hardware store, and comes in various sizes.)
8. Tighten the hex bolts in the fence firmly.
9. Confirm that the arrow in the kerf plate points to 0 degree. If not, loosen the two screws in the bottom of the miter detent spring lever and adjust accordingly.


Bevel Angle

A. Vertical stop: 0 degree adjustment

1. Lower the saw head to its lowest position and lock it with the head lock button.
2. Loosen the bevel lock handle on the back of the saw.
3. Check that the blade is perpendicular to the table as measured, using a small carpenter square. If not:
 - a. Use an open-end wrench to loosen the hex lock nut and then turn the hex stop bolt at the back right side of the table.
 - b. Turn the bolt counter-clockwise and the 0 point moves left, closing the angle. Turning it clockwise moves the 0 point to the right, opening the angle.
 - c. When you have established the vertical stop correctly, tighten the lock nut down to hold the setting.
 - d. Make sure that the needle points to 0 degree on the scale. If not, loosen the screws and adjust the needle.

B. Bevel stop: 45 degrees adjustment

1. Lower the saw head to its lowest position and lock it with the head lock button.
2. Loosen the bevel lock handle on the back of the saw.
3. Check that the blade is at 45 degrees to the table as measured, using a small carpenter square. If not:
 - a. Use an open-end wrench to loosen the hex lock nut and then turn the hex stop bolt at the back left side of the table.
 - b. Turn the bolt clockwise and the 45 degrees point moves left, opening the angle. Turning it counter-clockwise moves the 45 degrees stop to the right, closing the angle.
 - c. When you have established the 45 degrees stop correctly, tighten the lock nut down to hold the setting.
 - d. Make sure that the needle points to 45 degrees on the scale. If not, loosen the screws and adjust the needle.

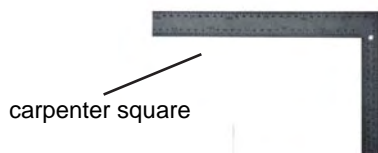


REPLACING SAW BLADE



WARNING! Prior to performing any assembly and/or adjustment procedures, make sure the Power Cord of the Miter Saw is unplugged from its electrical outlet. Make sure the unit has completely cooled, and wear heavy-duty work gloves.



1. When replacing the saw blade, make sure the new saw blade has a diameter of 10", an RPM rating of at least 6000, an arbor hole of 5/8" diameter.

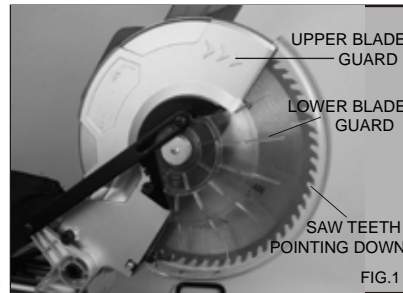


2. When mounting the new saw blade, the direction arrows on the blade correspond with the arrow on the upper guard. (See Figure.1)

3. Put the saw in the upper position. (See Figure. 2)



4. Loosen the screws that hold the lower guard in place. Then use a # 3 Phillips screwdriver and allen key to loosen the screws. (See Figure 3.)

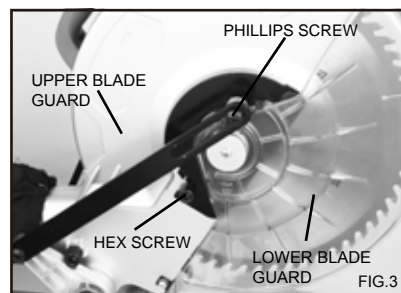


MAINTENANCE




REPLACING SAW BLADE


5. Rotate the lower blade guard out of the way. (see Figure 4.)

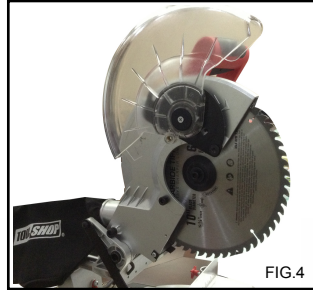

6. Depress the spindle lock to keep the saw blade from turning. (See Figure 5.)

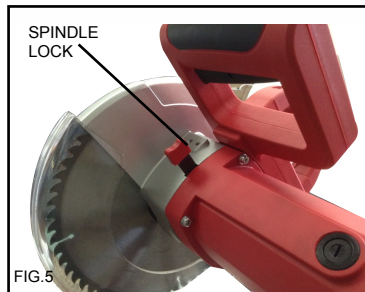

7. Use the wrench to unscrew and remove the spindle bolt. NOTE: The Spindle Bolt unscrews in a clockwise direction. Then, remove the Outer Flange. (See Figure 6.)

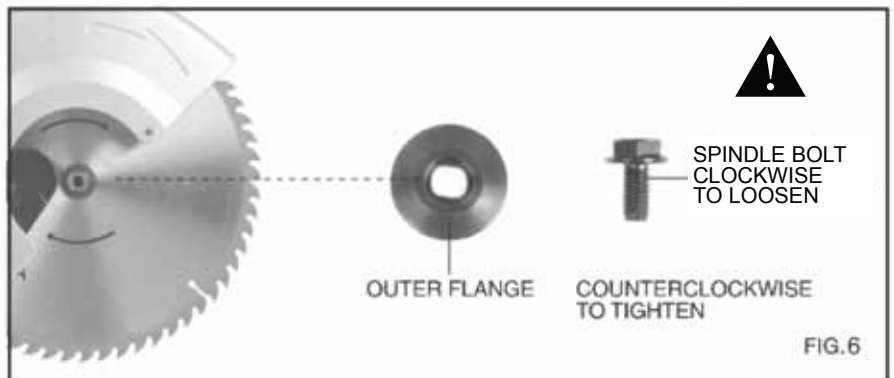

8. INSTALL A NEW BLADE

Make sure to match the direction arrows marked on the new blade with the direction arrows marked on the upper blade guard. (saw teeth should always be pointing downward).

Replace outer flange.

Tighten spindle bolt securely, using the blade wrench and tightening counterclockwise.

Rotate lower blade guard back into place, replace any screws that were removed, tighten the screws that hold the upper and lower guard in place, by tightening in clockwise rotation.

Remove cross pin so the saw can be lowered into cutting position.

Disengage spindle lock.


PARTS LIST

Please refer to the schematic drawing on page 11.

| NO. | Description | QTY | NO. | Description | QTY |
|-----|---------------------------|-----|-----|-----------------------------|-----|
| 1. | Spindle clip 16 | 2 | 72 | Washer 10 | 1 |
| 2. | Pivot shaft | 1 | 73 | Screw M6x35 | 1 |
| 3. | Sliding pole | 2 | 74 | Locknut M12 | 1 |
| 4. | Spring | 1 | 75 | Washer 12 | 1 |
| 5. | Screw | 3 | 76 | BearingΦ25×Φ40×35 | 3 |
| 6. | Washer | 1 | 77 | Cover | 2 |
| 7. | Adjusting piece | 1 | 78 | Slide-bar seat (back) | 1 |
| 8. | Head lock Pin | 1 | 79 | Clip for cable | 1 |
| 9. | O-ring 4.5x1.8 | 1 | 80 | Screw M6x16 | 1 |
| 10. | Circlip | 2 | 81 | Rubber nail A | 2 |
| 11. | Slide-bar seat (front) | 1 | 82 | Bended arm | 1 |
| 12. | Screw M6x8 | 5 | 83 | Knob | 1 |
| 13. | Screw M8x20-L | 1 | 84 | Felt | 1 |
| 14. | Washer 8 | 1 | 85 | Screw M5x10 | 4 |
| 15. | Upper pressing plate | 1 | 86 | Screw M6x12 | 1 |
| 16. | Saw blade | 1 | 87 | Screw M6x25 | 6 |
| 17. | Screw M4x10 | 3 | 88 | Finger | 1 |
| 18. | Washer 4 | 3 | 89 | Link | 1 |
| 19. | Lower pressing plate | 1 | 90 | Safety guard | 1 |
| 20. | Bearing retainer | 1 | 91 | Washer | 1 |
| 21. | Bearing 6003-2Z | 1 | 92 | Spring | 1 |
| 22. | Gear box cover | 1 | 93 | Screw | 1 |
| 23. | Output spindle | 1 | 94 | Locating plate | 1 |
| 24. | Key | 1 | 95 | Driving plate | 1 |
| 25. | Gear | 1 | 96 | Knob | 3 |
| 26. | Spindle clip 20 | 1 | 97 | Washer 6 | 5 |
| 27. | Bearing 699-2Z | 1 | 98 | Spring washer 6 | 1 |
| 28. | Washer 5 | 9 | 99 | Fence | 1 |
| 29. | Spring washer 5 | 9 | 100 | Shaft | 1 |
| 30. | Screw M5x16 | 2 | 101 | Table | 1 |
| 31. | Cable | 1 | 102 | Washer 8 | 1 |
| 32. | Screw M5x35 | 6 | 103 | Locknut M8 | 1 |
| 33. | Tapping screw ST4.8x60 | 2 | 104 | Finger | 1 |
| 34. | Handle | 1 | 105 | Blade guide A | 1 |
| 35. | Tapping screw ST4.2x16 | 6 | 106 | Blade guide B | 1 |
| 36. | Handle | 1 | 107 | Lock-screw M10x60 | 1 |
| 37. | Switch cover | 1 | 108 | the cover of knob | 1 |
| 38. | Switch | 1 | 109 | Screw M6x30 | 1 |
| 39. | Handle | 1 | 110 | Support | 1 |
| 40. | Tapping screw ST4.2x14 | 2 | 111 | Shaft | 1 |
| 41. | Cable pressboard | 1 | 112 | Locking block | 1 |
| 42. | Cable clip | 1 | 113 | Circlip | 1 |
| 43. | Brush holder | 2 | 114 | Knob | 2 |
| 44. | Carbon brush | 2 | 115 | Steel ball 8 | 1 |
| 45. | Brush cover | 2 | 116 | Bracket | 2 |
| 46. | House | 1 | 117 | Rubber foot | 4 |
| 47. | Stator | 1 | 118 | Spring | 1 |
| 48. | Tapping screw ST4.2x70 | 2 | 119 | Screw M10x10 | 1 |
| 49. | Flow guide | 1 | 120 | Bolt M8x35 | 1 |
| 50. | Bearing cover | 1 | 121 | Base | 1 |
| 51. | Bearing 629-2Z | 1 | 127 | Screw M4x6 | 1 |
| 52. | Rotor | 1 | 128 | Pole | 1 |
| 53. | Knob | 1 | 129 | Lock-screw | 1 |
| 54. | Locking pole | 1 | 130 | Bracket of clamp | 1 |
| 55. | Spring | 1 | 131 | Pressboard of clamp | 1 |
| 56. | Bearing 6001-2Z | 1 | 132 | Circlip | 1 |
| 57. | Screw M6x57 | 1 | 133 | Inner hexagon spanner 6 m m | 1 |
| 58. | Nut M6 | 1 | 134 | Dust collecting bag | 1 |
| 59. | Screw M6x25 | 1 | 135 | Wire holder | 1 |
| 60. | Nut M6 | 3 | | | |
| 61. | Aluminum protective cover | 1 | | | |
| 62. | Screw M8x12 | 2 | | | |
| 66. | Cover | 1 | | | |
| 67. | Locknut M5 | 2 | | | |
| 68. | Screw | 1 | | | |
| 69. | Spring | 2 | | | |
| 70. | Knob | 1 | | | |
| 71. | Screw | 1 | | | |



SCHEMATIC DRAWING

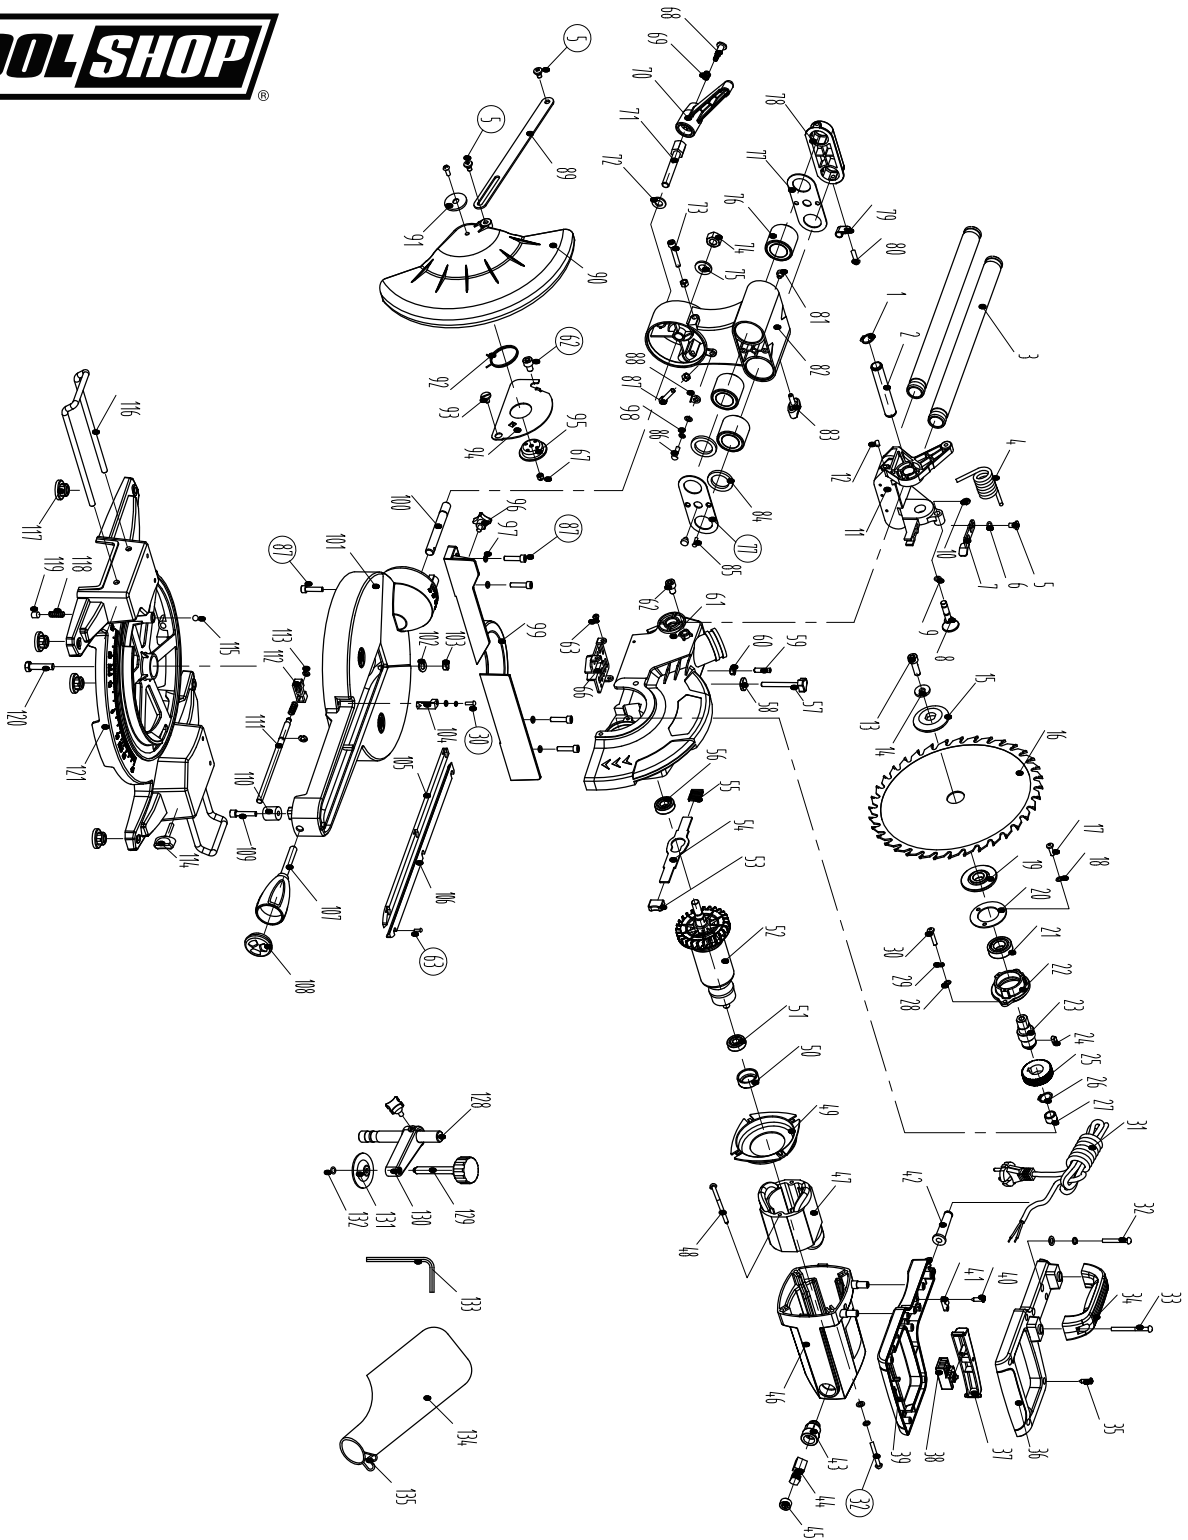

WARNING Repairs should be made by an authorized repair center. Do not open or disassemble this power tool. Contact at 1-866-915-8626 for questions regarding this power tool.

TOOL SHOP® 10" 15 AMP SLIDING MITER SAW WARRANTY

1-YEAR LIMITED WARRANTY:

This TOOL SHOP® brand power tool carries a 1-Year Limited Warranty to the original purchaser. If the tool fails within one (1) year from the date of purchase, simply bring this tool with your original sales receipt back to your nearest MENARDS® retail store. At its discretion, TOOL SHOP® agrees to have the tool replaced with the same or similar TOOL SHOP® product free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. Notwithstanding the foregoing, this limited warranty does not cover any damage that has resulted from abuse or misuse of the Merchandise. This warranty: (1) excludes expendable parts including but not limited to blades, belts, bits, light bulbs, and/or batteries; (2) shall be void if this tool is used for commercial and/or rental purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state. Be careful, tools are dangerous if improperly used or maintained. Seller's employees are not qualified to advise you on the use of this Merchandise. Any oral representation(s) made will not be binding on seller or its employees. The rights under this limited warranty are to the original purchaser of the Merchandise and may not be transferred to any subsequent owner. This limited warranty is in lieu of all warranties, expressed or implied including warranties or merchantability and fitness for a particular purpose. Seller shall not be liable for any special, incidental, or consequential damages. The sole exclusive remedy against the seller will be for the replacement of any defects as provided herein, as long as the seller is willing or able to replace this product or is willing to refund the purchase price as provided above. For insurance purposes, seller is not allowed to demonstrate any of these power tools for you.

For questions / comments, technical assistance or repair parts –
Please call toll free at: 1-866-915-8626 (M-F 8am – 5pm EST)

SAVE YOUR RECEIPTS. THIS WARRANTY IS VOID WITHOUT THEM.